


Accessories: J-Juan Front Brake Lever (25-08212)

Fits Motorcycles: MY20 and later: SR/S, SR/F;
MY22 and later: SR;
MY23 and later: DSR/X

Overview

The J-Juan front brake lever is more adjustable and more robust than the standard brake lever. It is also hinged for preventing damage in case of a fall. This document provides installation and adjustment instructions for the new lever.

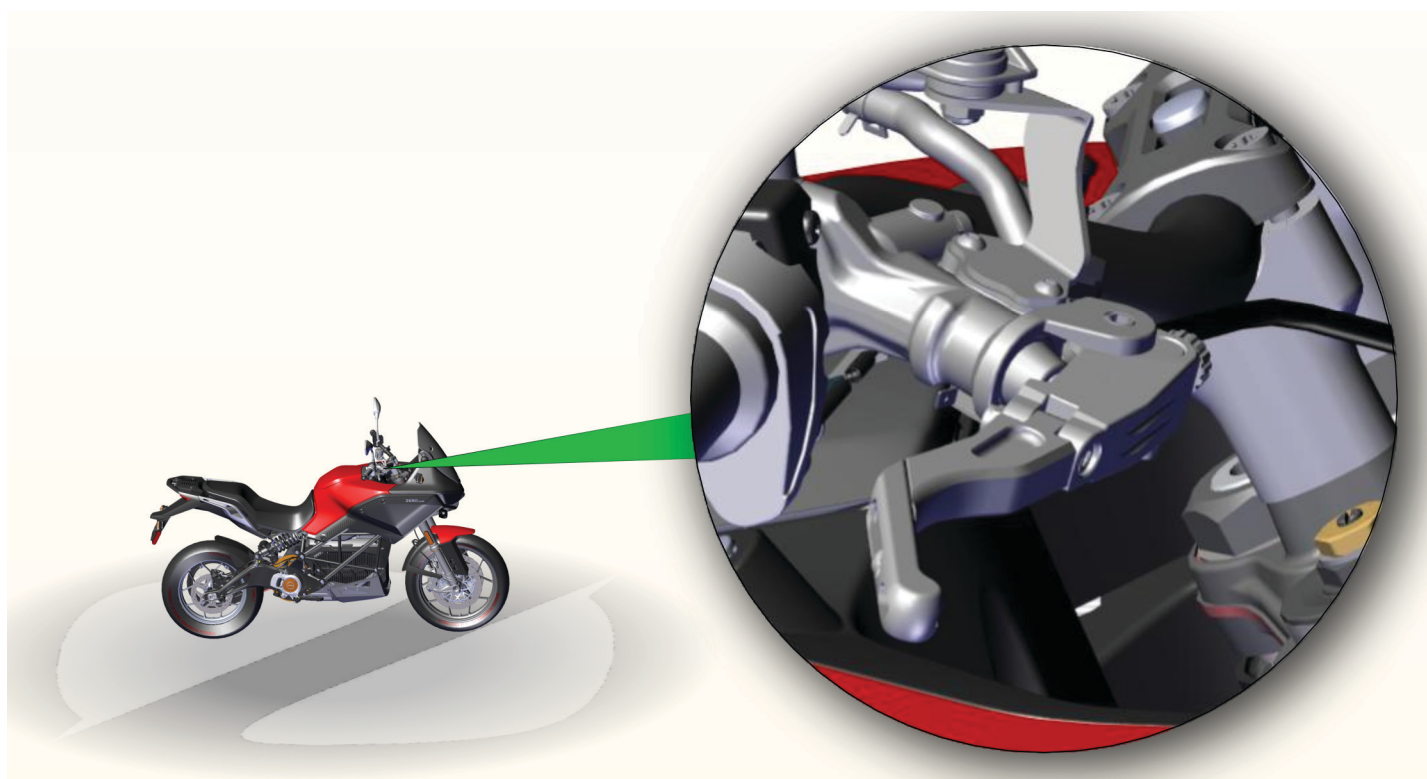

Required Parts



J-Juan Front Brake Lever (25-08212)

Installation

1. Remove the pin, nut and washer that secure the brake lever assembly.

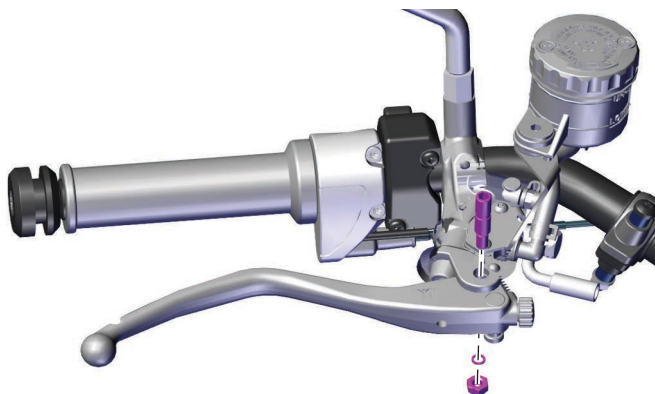


Figure 1

2. Remove the spacer, then remove the pivot and spring.

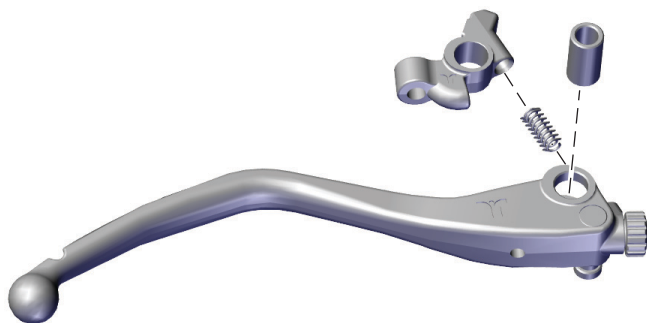


Figure 2

3. Assemble the pivot, spring and spacer onto the new brake lever.



Figure 3

4. Position the new lever in place and install the new pin and nut.

- Torque pin to: 1 ± 0.4 ft lb (1.5 ± 0.5 Nm)
- Torque nut to: 4 ± 1 ft lb (5.5 ± 1.5 Nm)

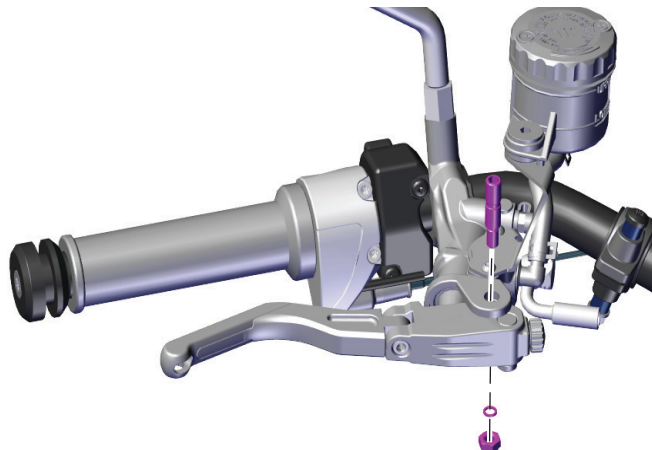


Figure 4

5. Adjust the brake lever-to-grip distance as necessary using the adjustment knob.

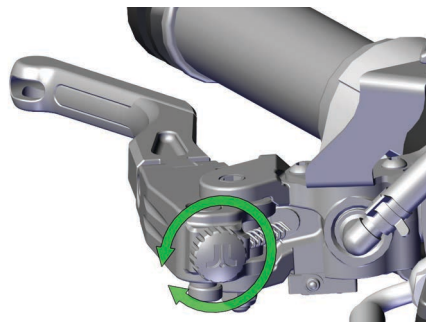


Figure 5

6. Adjust the length of the lever using the adjustment screw on the inside of the lever.

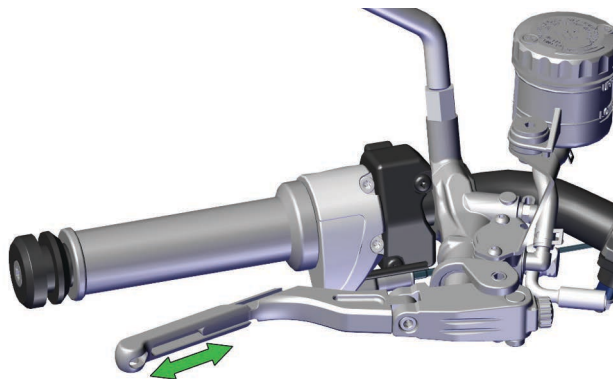


Figure 6